

**(1) Front A-Arm Guards:**

6 – Screw M6x16 – 6921

**(2) Front Diff Skid Plate:**

6 – Screw M6x16 – 6921

4 – Screw M8x25 – 7991

4 – Join Plate D 009

**(3) Front Skid Plates:**

10 – Screw M6x20 – 6921

4 – Screw M6x30 – 6921

12 – Screw M8x25 – 7991

10 – Special Washer B 048

2 – Bushing  $\varnothing 16 \times \varnothing 6,5 \times 16$  B004

2 – Bushing  $\varnothing 15 \times \varnothing 6,5 \times 14$  B006

4 – O-Ring M6

6 – Join Plate D 009

**(4) Central Skid Plate:**

6 – Screw M6x20 – 6921

6 – Screw M8x25 – 7991

6 – Special Washer B 048

2 – Join Plate D 009

**(5) Rear Skid Plate:**

2 – Screw M6x16 – 6921

4 – Screw M6x30 – 6921

2 – Screw M8x25 – 7991

2 – Screw M8x20 – 6921

2 – Special Washer B 049

4 – Bushing  $\varnothing 15 \times \varnothing 6,5 \times 13$  B003

4 – O-Ring M6

**(6) Rear Trailing Arm Guards:**

2 – Screw M8x80 – 933

2 – Screw M8x90 – 933

12 – Wide Flange Washer M8

6 – Nylock Nut M8

**SEGWAY VILLAIN SX10**

Ed. 2 | 110300503PH


Kit Completo PHD

Complete Kit PHD



REMOVA A PELÍCULA  
PROTECTORA  
REMOVE THE  
PROTECTIVE FILM

**IMPORTANTE: Remova as Protecções Originais / IMPORTANT: Remove the Original Protections**

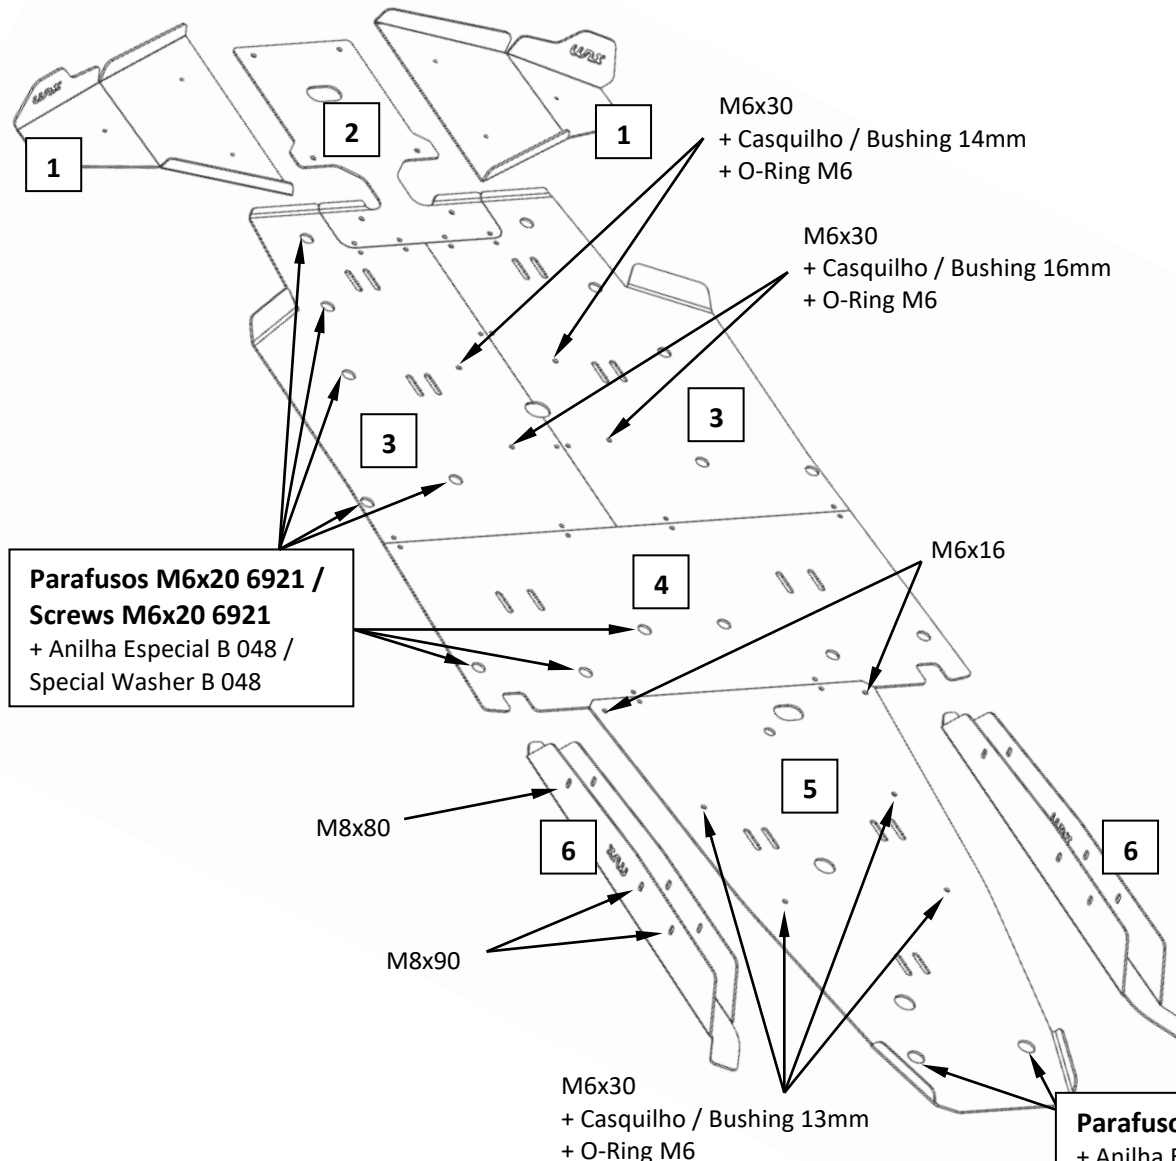

**(1) Prot. Triângulos Frente:**

6 – Paraf. M6x16 – 6921

**(2) Prot. Diferencial Frente:**

6 – Paraf. M6x16 – 6921

4 – Paraf. M8x25 – 7991

4 – Patilha de União D 009

**(3) Prot. Motor Frente:**

10 – Paraf. M6x20 – 6921

4 – Paraf. M6x30 – 6921

12 – Paraf. M8x25 – 7991

10 – Anilha Especial B 048

2 – Casq.  $\varnothing 16 \times \varnothing 6,5 \times 16$  B 004

2 – Casq.  $\varnothing 15 \times \varnothing 6,5 \times 14$  B 006

4 – O-Ring M6

6 – Patilha de União D 009

**(4) Prot. Motor Central:**

6 – Paraf. M6x20 – 6921

6 – Paraf. M8x25 – 7991

6 – Anilha Especial B 048

2 – Patilha de União D 009

**(5) Prot. Motor Inferior:**

2 – Paraf. M6x16 – 6921

4 – Paraf. M6x30 – 6921

2 – Paraf. M8x25 – 7991

2 – Paraf. M8x20 – 6921

2 – Anilha Especial B 049

4 – Casq.  $\varnothing 15 \times \varnothing 6,5 \times 13$  B 003

4 – O-Ring M6

**(6) Prot. Triângulos Trás:**

2 – Paraf. M8x80 – 933

4 – Paraf. M8x90 – 933

12 – Anilha Aba Larga M8

6 – Porca Freitada M8

**Parafusos M8x20 6921 / Screws M8x20 6921**  
+ Anilha Especial B 049 / Special Washer B 049